

## Upgrade Parts

---



For those enthusiasts that want to get the best performance out of their MSS or old Mamod loco we have the world's most extensive range of high quality upgrade parts.

Many upgrades in our range are those previously manufactured by IP Engineering. We have now taken over the manufacture and supply of this range and will continue to add new products.

We have the most affordable and commonly applied upgrade parts to increase the performance of you MSS or Mamod loco in our Popular Range of Upgrades.

For the really serious and those wanting the best upgrades available for their MSS or Mamod loco we have our range of Premium Upgrades.

We have the highest spec silver soldered 45psi boiler available anywhere for your MSS or Mamod locomotive.

Our unique Gas-Flow Cylinders have been designed by a Formula 1 engine designer using dynamic gas-flow techniques to ensure the most efficient flow of steam through the steam ports and cylinder blocks.

---

Dream Steam Ltd.

14 Orchard Avenue. Aylesford. Kent ME20 7LY.

Tel: 08450 773 007 Email: [sales@dream-steam.com](mailto:sales@dream-steam.com)

[www.Dream-Steam.com](http://www.Dream-Steam.com)

## Dream Steam

---

### Dead-Leg Displacement Lubricator for Mamod or MSS Side Tank Locomotive

---



---

Thank you for purchasing this Dream Steam Dead-Leg Displacement Lubricator for Mamod and MSS Side Tank Live Steam Locomotives.

We hope you enjoy using this upgrade part, which is one of many we offer for the Mamod and MSS railway range. Please see our website and back of this booklet for further details.

**Introduction:** This lubricator is intended for use with the old Mamod and new MSS side tank live steam locomotives. It provides the correct lubrication to the cylinders, especially when used with 'O' ring pistons. Only use 460 Compound Steam Oil in this lubricator, available separately.

The new revised design now incorporates an adjustable fixing plate so different heights and minor manufacturing variation in loco construction can be compensated for when fitting. A drain screw has also been reintroduced following customer feedback to make emptying easier and a special curved fine tipped syringe is now included to aid filling of oil and drawing off water condensate from the cup.

# Instruction for fitting your new Dead-Leg Displacement Lubricator

**Priming:** Dead-leg displacement lubricators work by allowing steam into the cup via a pipe from the main steam pipe, which then condenses into water. Oil floats on water, so as the cup fills with water, oil rises to the top and is displaced back down the pipe. The action by which this happens is similar to water swirling down a plug hole — as steam comes up the centre of the pipe, oil swirls around the inner surface and down the pipe.

For this to happen effectively, the pipe needs priming with 460 compound steam oil to coat the inner surface. Using the hook nosed syringe or a very fine needle injector, drop oil into the pipe until it emerges from the other end. Once you are happy that oil has coated the entire length of the lubricator pipe inside it is ready for fitting.

**Fitting:** The lubricator cup fits to the right hand side of the smoke box and the 'T' piece fitting at the end of the pipe pushes into the back of the forward and reverse valve block in place of the steam supply pipe. The steam supply pipe is shortened and then fits into the fitting. If a regulator kit is to be fitted, the two are best fitted together.

1. If the smoke box is not riveted, unscrew it and remove.
2. Remove the complete forward and reverse valve block.
3. If the smoke box is not removed, slacken it by removing the two screws holding it to the chassis in front of the cylinder blocks.
4. Bend the lubricator pipe and pass from the smoke box side position to between the chassis frames with the male end of the 'T' piece pointing towards the front.
5. Ensure the lubricator pipe is not kinked and slopes downward along its length.
6. Try and reassemble the forward and reverse valve block with the 'T' piece pipe fully inserted.
7. The steam pipe then fits into the female end of the 'T' piece but will need trimming.
8. Note how much needs trimming off.
9. Remove the forward and reverse valve, and the steam pipe again.
10. Trim the steam pipe and clean all the parts.
11. Reassemble the loco and screw the lubricator cup to the side of the smoke box using the self tapping screw if not riveted.

**Operation:** With NO pressure in the boiler and the drain screw fully screwed in, unscrew the brass filler cap and fill the cup with 460 compound steam oil up to about 3mm from the top and refit the cap.

One cup-full of oil should be enough for two or three runs of 10-20 minutes each. However, some locos will use more whilst others will seem not to use any oil at all and last for longer. If the lubricator pipe has been primed properly, oil should be getting displaced by condensed water.

After running a few times, steam will have condensed in the bottom of the cup and displaced the oil. The water left behind should be either drained by removing the drain screw or sucked out using the fine curved tipped syringe supplied and the cup refilled with fresh 460 compound steam oil.

**Fault Fixing:** When refitting the drain screw, please do not over tighten as this may damage the thread or distort the small 'O' ring. It should be just nipped tight enough to make a seal so steam, water and oil do not escape. If leaks do occur, a small amount of plumbers PTFE tape lightly wound round the tread of the screw should provide a good seal.

If after three runs of 10 minutes no water has condensed and the oil cup is still full of oil, you may need to try re-priming the lubricator pipe again.

Remove the lubricator and fill the cup to the brim covering the small pipe opening. Ensure no oil has spilt or run down the sides. Leave over night in an upright position with the cap off. In the morning check oil has emerged from the 'T' piece, which will indicate oil has definitely got through the whole length of pipe.

If no oil is present, there may be a kink in the pipe that needs to be bent out to allow oil to flow. To test for kinks whilst the lubricator is removed from the loco and cool; remove any remaining oil and with the cap removed, try holding your finger over the female end of the 'T' piece and blow into the male end. You should hear a little hiss as air escapes from the other end of the pipe in the cup. You can try this with the cup end in some water to double check for air bubbles coming out of the pipe in the oil cup. If no air then the pipe should be straightened until air passes and start again.

**Safety:** This product is not intended for and should not be used by children. Fitting requires some dismantling and modification to the locomotive and should only be attempted by a competent adult with suitable tools. Checks must be made that the loco is correctly reassembled and steam tested prior to use. A safety valve must be fitted to the locomotive at all times when in use.

Never remove the filler cap or drain screw when steam or pressure may be present.

Only use 460 Compound Steam Oil in this lubricator, available from our website.